



Landscape Design and Installation using Melcourt Products Walk Surfaces

For permanent natural walkways, an 'above ground level' or 'below ground level' construction level is recommended.

Above Ground Level - end section

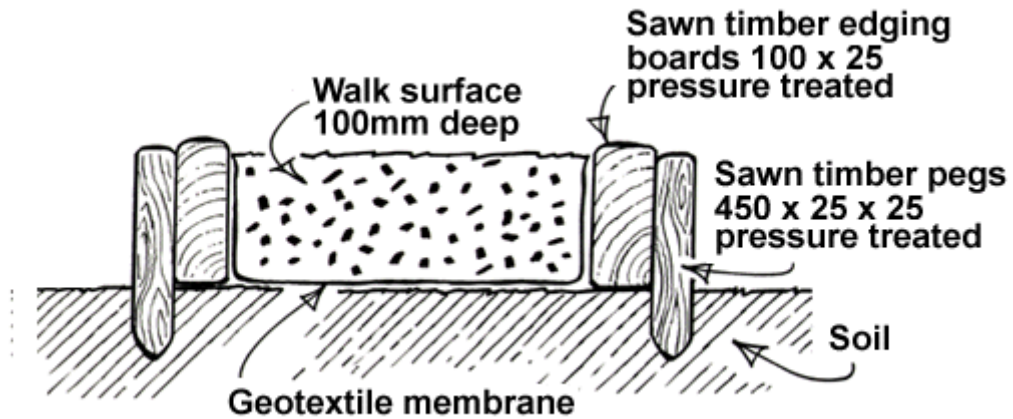

Below Ground Level - end section

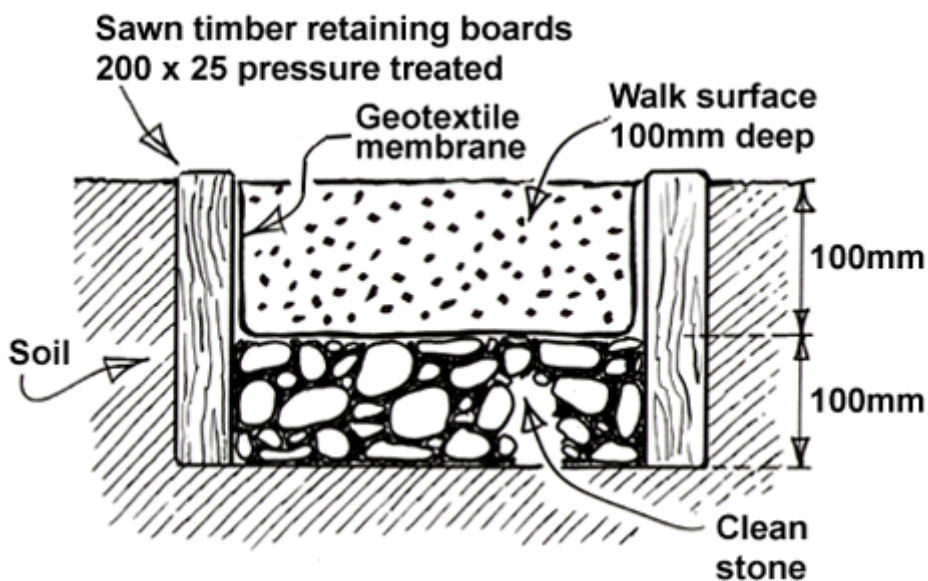

Construct the walkway in accordance with the project drawings.

Lay the walk surface evenly, to the minimum settled depth, allowing for settlement, as set out in the Bill of Quantities.

To construct a 'temporary natural walkway', lay a polythene or geotextile sheet directly onto the ground to be covered.

Install Melcourt walk chips or woodfibre onto the sheet to the specified depth as set out in the Bill of Quantities.

Remove, if required after use.



Contact

Melcourt Industries Limited, Boldridge Brake, Long Newnton, Tetbury, Gloucestershire. GL8 8RT
 Tel: +44 (0)1666 502711 Fax: +44 (0)1666 504398 Email: mail@melcourt.co.uk
 Web Site: www.melcourt.co.uk